

# PCSCHEMATIC AUTOMATION 23 INSTALLATION GUIDE

## 1. Installation/update on individual PC

Execute PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe

Follow the on-screen instructions in the setup program

## 2 Installation/update on Terminal Server/Citrix Server

Change terminal server user mode from execute to install (change user /install)

Execute PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe

Follow the on-screen instructions in the setup program.

Check that users have write-access to all folders under the PCAutomation folder

Change terminal server user mode from install to execute (change user /execute)

Please note that Automation requires a Net license when it is running on a terminal server – see section 5 for installation of License server software.

## 3 Installation/update as multiuser installation on network drive

Execute PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe

Follow the on-screen instructions in the setup program.

When the program is installed, do the following on all PC's from which you want to use Automation: Execute Pcselcad.exe from the PCAutomation folder on the network, which was created during the installation of the program. If necessary, you can also create a shortcut to the Pcselcad.exe file.

## 4 Silent installation/update.

The following command line switches can be used when running the installation / update silent:

**-gm2** Selfextracter runs silent  
**/q** PCSCHEMATIC setup runs silent – but creates a log file in temp%  
**/i** Installs new version  
**/I:<path>** Installs new version at <path>  
**/u** Updates existing version  
**/u:<path>** Updates existing version at <path>

To make a silent installation on c:\PCSELCAD

Execute **PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe -gm2 /q /i**

To install on a specific path – e.g. in the folder d:\automation

Execute **PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe -gm2 /q /i:d:\automation**

To make a silent update on a PCSELCAD folder (if you only have 1 installation of Automation)

Execute **PCSCHEMATIC\_Automation\_23\_x\_x\_x.exe -gm2 /q /u**

To update an existing installation – e.g. in the path d:\automation  
Execute `PCSCHEMATIC_Automation_23_x_x_x.exe -gm2 /q /u:d:\automation`

## 5 Installation of PCS License server

- a. Go to <https://www.pcschematic.com/en/support/automation-updates/#sysinfo>
- b. Select **PCS License Server**
- c. Download **PCS License Server**
- d. Execute the downloaded program, and follow its on-screen instructions

## 6 Download links

You can download the Automation software here:

<https://www.pcschematic.com/en/support/automation-updates/>