

PCSCHEMATIC AUTOMATION 22 INSTALLATION GUIDE

1. Installation/update on individual PC

Execute PCSCHEMATIC_Automation_UK_22_x_x_x.exe

Follow the on-screen instructions in the setup program

2 Installation/update on Terminal Server/Citrix Server

Change terminal server user mode from execute to install (change user /install)

Execute PCSCHEMATIC_Automation_UK_22_x_x_x.exe

Follow the on-screen instructions in the setup program.

Check that users have write-access to all folders under the PCSELCAD folder

Change terminal server user mode from install to execute (change user /execute)

Please note that Automation requires a Net license when it is running on a terminal server – see section 5 for installation of License server software.

3 Installation/update as multiuser installation on network drive

Execute PCSCHEMATIC_Automation_UK_22_x_x_x.exe

Follow the on-screen instructions in the setup program.

When the program is installed, do the following on all PC's from which you want to use Automation: Execute Pcselcad.exe from the PCSELCAD folder on the network, which was created during the installation of the program. If necessary, you can also create a shortcut to the Pcselcad.exe file.

4 Silent installation/update.

The following command line switches can be used when running the installation / update silent:

-gm2	Selfextracter runs silent
/q	PCSCHEMATIC setup runs silent – but creates a log file in temp%
/i	Installs new version
/I:<path>	Installs new version at <path>
/u	Updates existing version
/u:<path>	Updates existing version at <path>

To make a silent installation on c:\PCSELCAD

Execute **PCSCHEMATIC_Automation_UK_22_x_x_x.exe -gm2 /q /i**

To install on a specific path – e.g. in the folder d:\automation

Execute **PCSCHEMATIC_Automation_UK_22_x_x_x.exe -gm2 /q /i:d:\automation**

To make a silent update on a PCSELCAD folder (if you only have 1 installation of Automation)

Execute **PCSCHEMATIC_Automation_UK_22_x_x_x.exe -gm2 /q /u**

To update an existing installation – e.g. in the path d:\automation
Execute `PCSCHEMATIC_Automation_UK_22_x_x_x.exe -gm2 /q /u:d:\automation`

5 Installation of PCS License server

- a. Go to <https://www.pcschematic.com/en/support/automation-updates/#sysinfo>
- b. Select **PCS License Server**
- c. Download **PCS License Server**
- d. Execute the downloaded program, and follow its on-screen instructions

6 Download links

You can download the Automation software here:

<https://www.pcschematic.com/en/support/automation-updates/>